

Preheat Function

The newly added preheat function allows the device to heat up the coil quickly at a higher wattage, which is especially obvious when using with an RDA, RBA, RTA and so on. It can also prolong the coil's life and produce a better flavor.

How to use:

1. In powered-off state, keep pressing the fire button and up button simultaneously, then you enter into the menu.
2. Press the fire button to shift among TCR M1, M2, M3, Preheat Power and Preheat Time.
3. Under each mode, you can increase or decrease the parameter by pressing the up or down button.
4. Keep pressing the fire button or leave the interface for several seconds to confirm.